


# RT BLIND BOX SIZES


## PRE-WAR RTs

(all measurements are Height x Width in Inches)

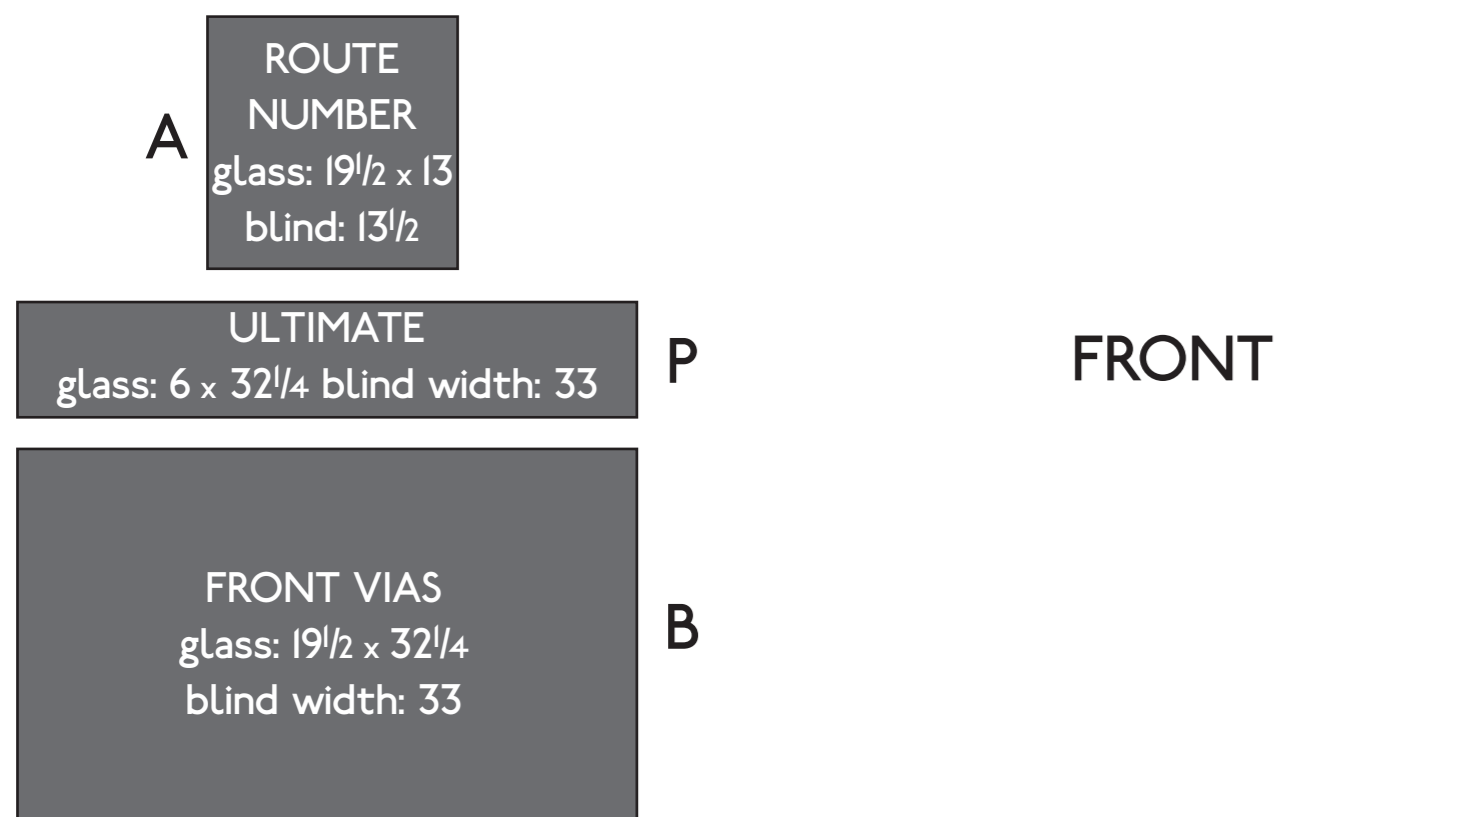





## POST-WAR RTs (and a few RTLs) with Roof Box

(all measurements are Height x Width in Inches)

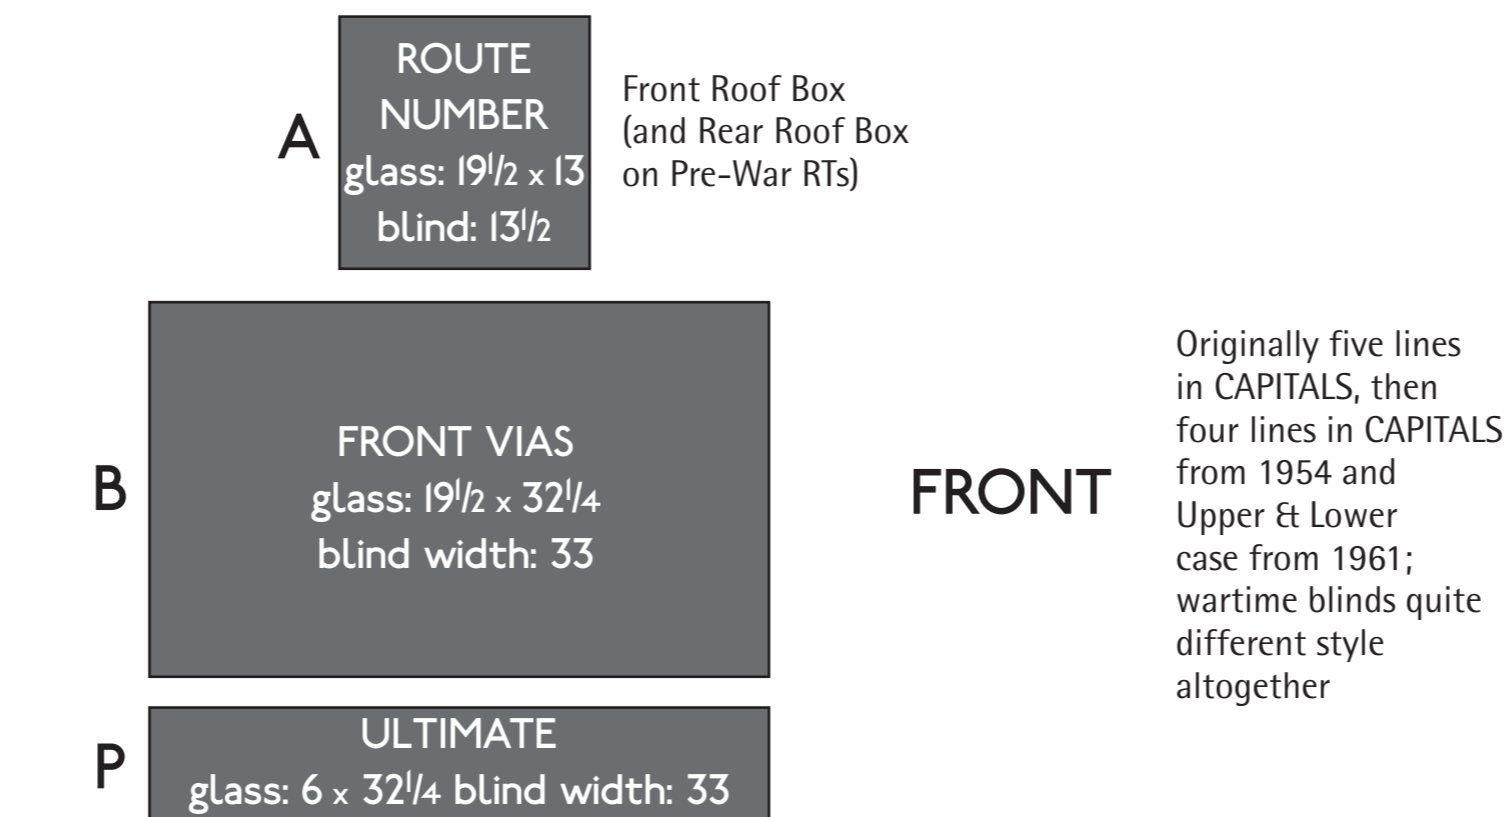


## POST-WAR RTs, RTLs without Roof Box, and RTWs

(all measurements are Height x Width in Inches)

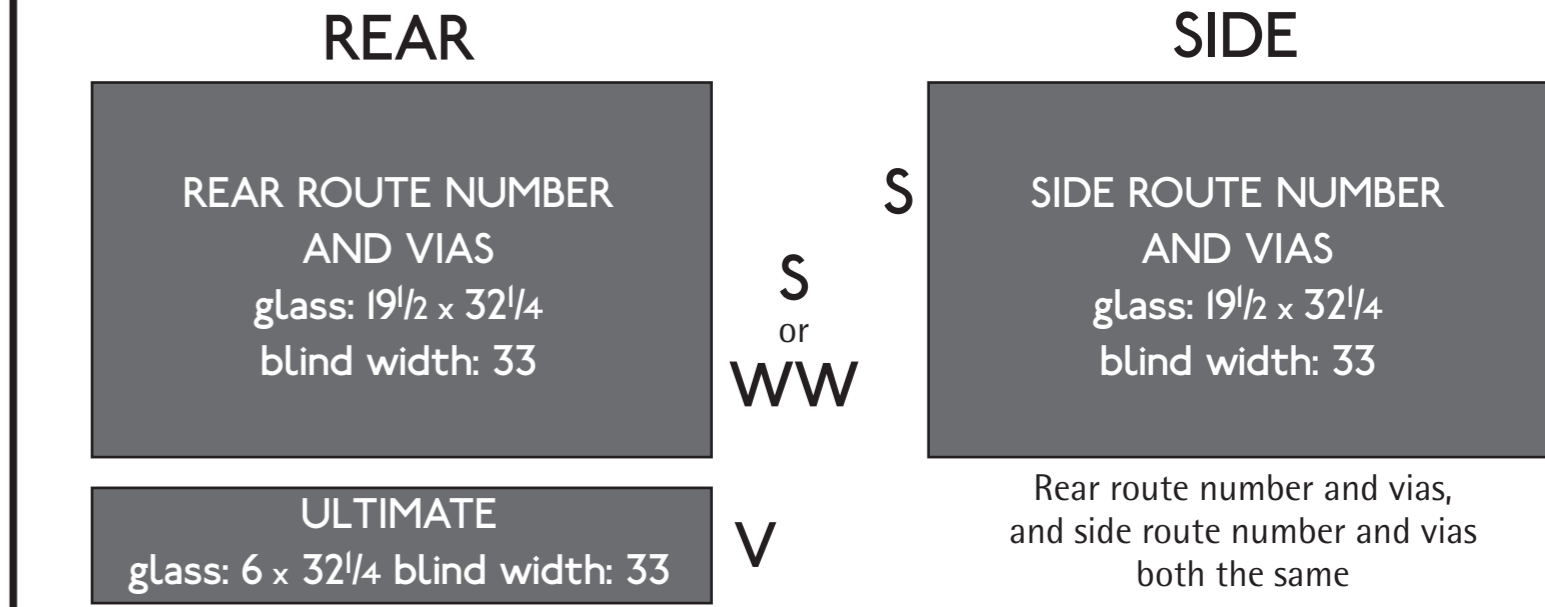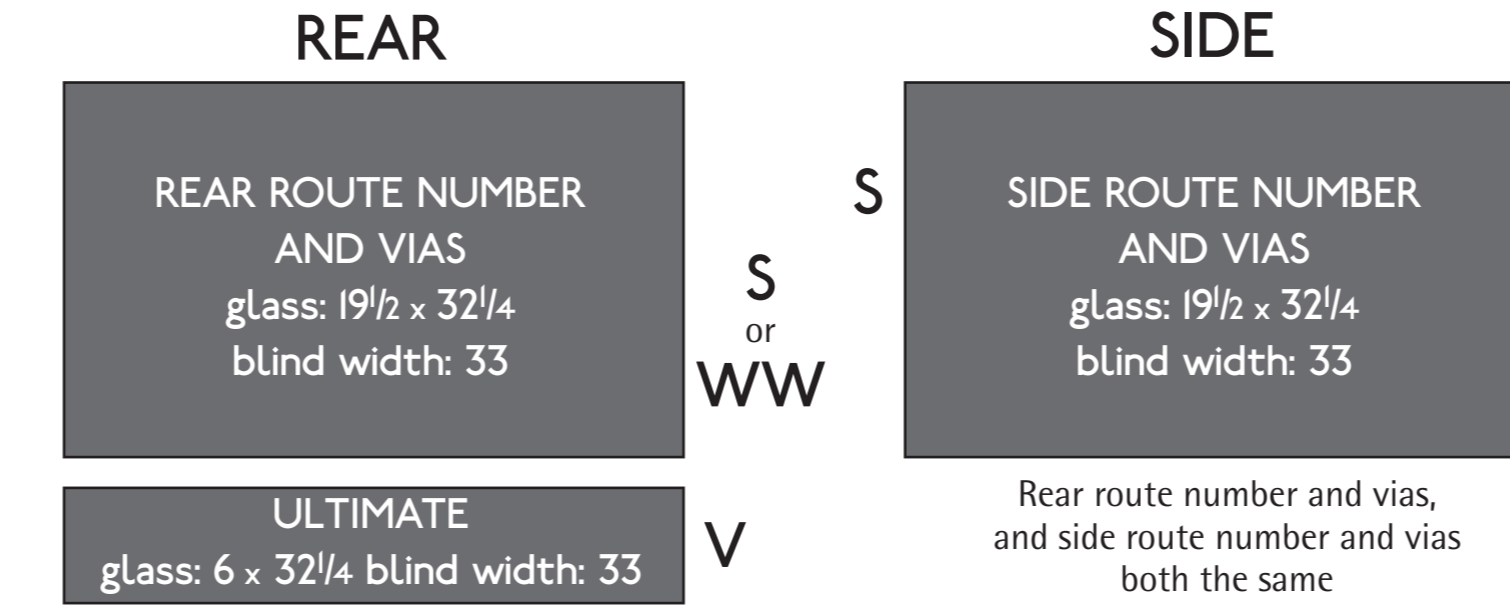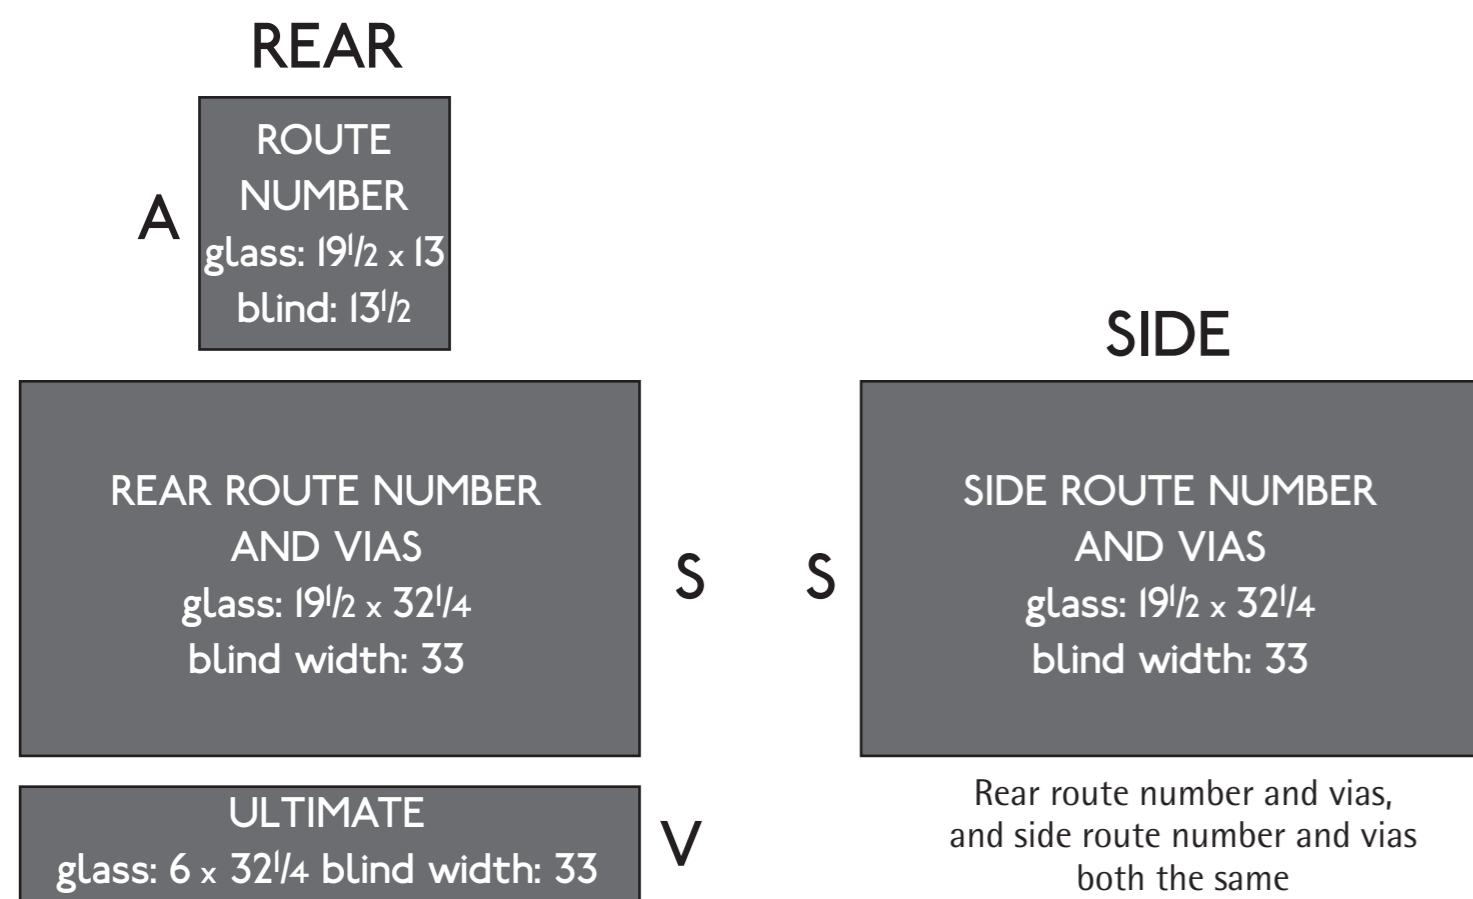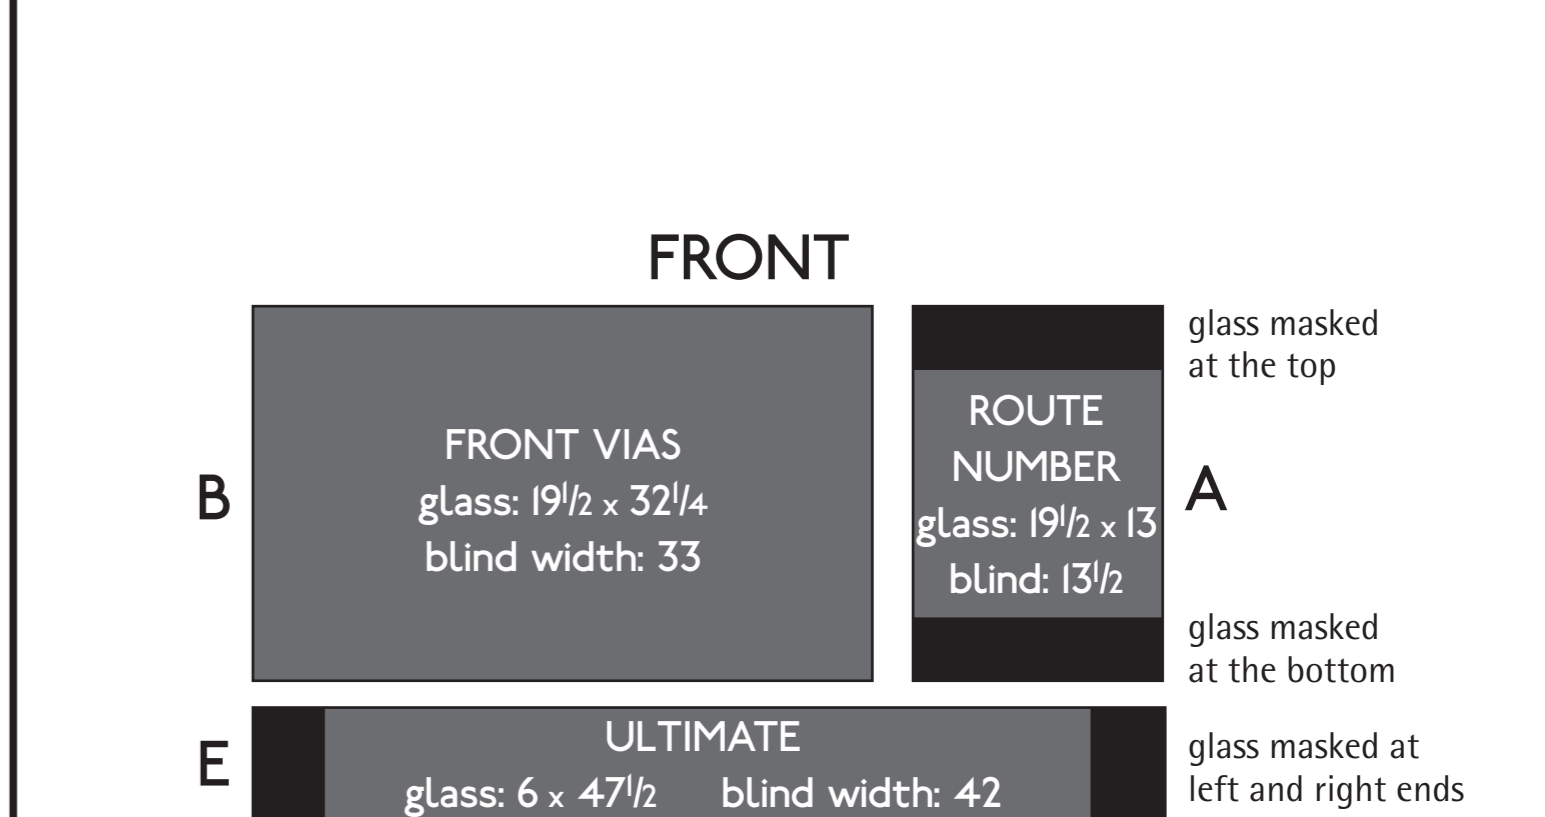

## CANOPY BLINDS POST 1946 TRIALS

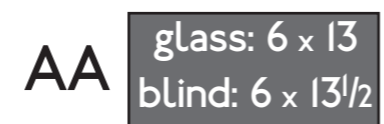

NOTES: There was significant evolution to metal plates, wartime stencilled route numbers and blind style content during the life of the Pre-War and Post-War RTs. THE ABOVE IS SIMPLIFIED FOR GENERAL PURPOSE USE ONLY

S were the same for side and rear, with via points and small route number; WW were large rear route number only, from 1966